IMSAI ECO 76-0061

Affected products: CP-A Rev-4


Summary

Modification to prevent memory writes during OUT instructions. For use with non-IMSAI memory boards.

This modification should be made to your front panel board using two additional sections of the 7400 that in located directly above S2 and S3. This will keep your unit from writing into memory during an output.

Details

- 1. On the component side, cut the trace between U24 pin 4 and U25 pin 3.
- 2. On the solder side, connect a jumper between U25 pin 3 and U25 pin 4.
- 3. On the solder side, connect a jumper between U25 pin 6 and U25 pins 9 and 10.
- 4. On the solder side, connect a jumper between U15 pin 2 and U25 pin 5.
- 5. On the solder side, connect a jumper between U25 pin 8 and U24 pin 4.

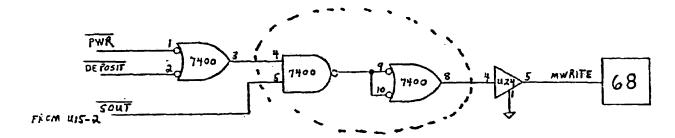

Notes

IMSAI MFG. CORP. released this ECO on February 3, 1976

Document Revision History

Revision	Date	Initial	Description
0	3/5/2024	NBB	Initial document creation.